

LG-iPECS

iPECS 50A ipecs 50B iPECS 100 iPECS 300 iPECS 600

LIP-8024 LIP-8012 HANDSETS



LG-ERICSSON

HOW TO FIND THE ATTENDANT STATION

PRESS THE **DND** BUTTON on a handset,

If the display reads **SELECT RING MODE** then it is the ATTENDANT station. (pick up & hang up to cancel)

If the display shows **DO NOT DISTURB** then it is NOT the ATTENDANT station. (press DND again to cancel)

The Attendant station is usually at Reception, but not always.

There can be up to 4 attendant stations on a system.

Click to return to [SET TIME](#)

For an onsite technician click

[. PHONE TECHS 2U .](#)