

# LG-iPECS

iPECS 50A ipecs 50B iPECS 100 iPECS 300 iPECS 600

**LIP-8024 LIP-8012 HANDSETS**



LG-ERICSSON

## HOW TO CHANGE THE TIME

Setting or changing the Time and Date on the Ipecs Phone system must be done from the [Attendant station](#).

You must enter the Date and the Time, you cannot change just the Time

Press **Trans/PGM** button

Press digits **0 4 1**

Enter Date in the format MMDDYY (Eg: **032414** is 24<sup>th</sup> Mar 2014)

Press **Hold/Save** button (display doesn't change yet)

Enter Time in 24 hour format (Eg: **1730** is 5:30pm)

Press **Hold/Save** button

### Why is it not working?

#### Common errors

Date entered with DD day first instead of MM month.

Expecting the display to change as you go.

Not using the [Attendant station](#).

For an onsite technician click

[. PHONE TECHS 2U .](#)